


K4 frontend v2.2

 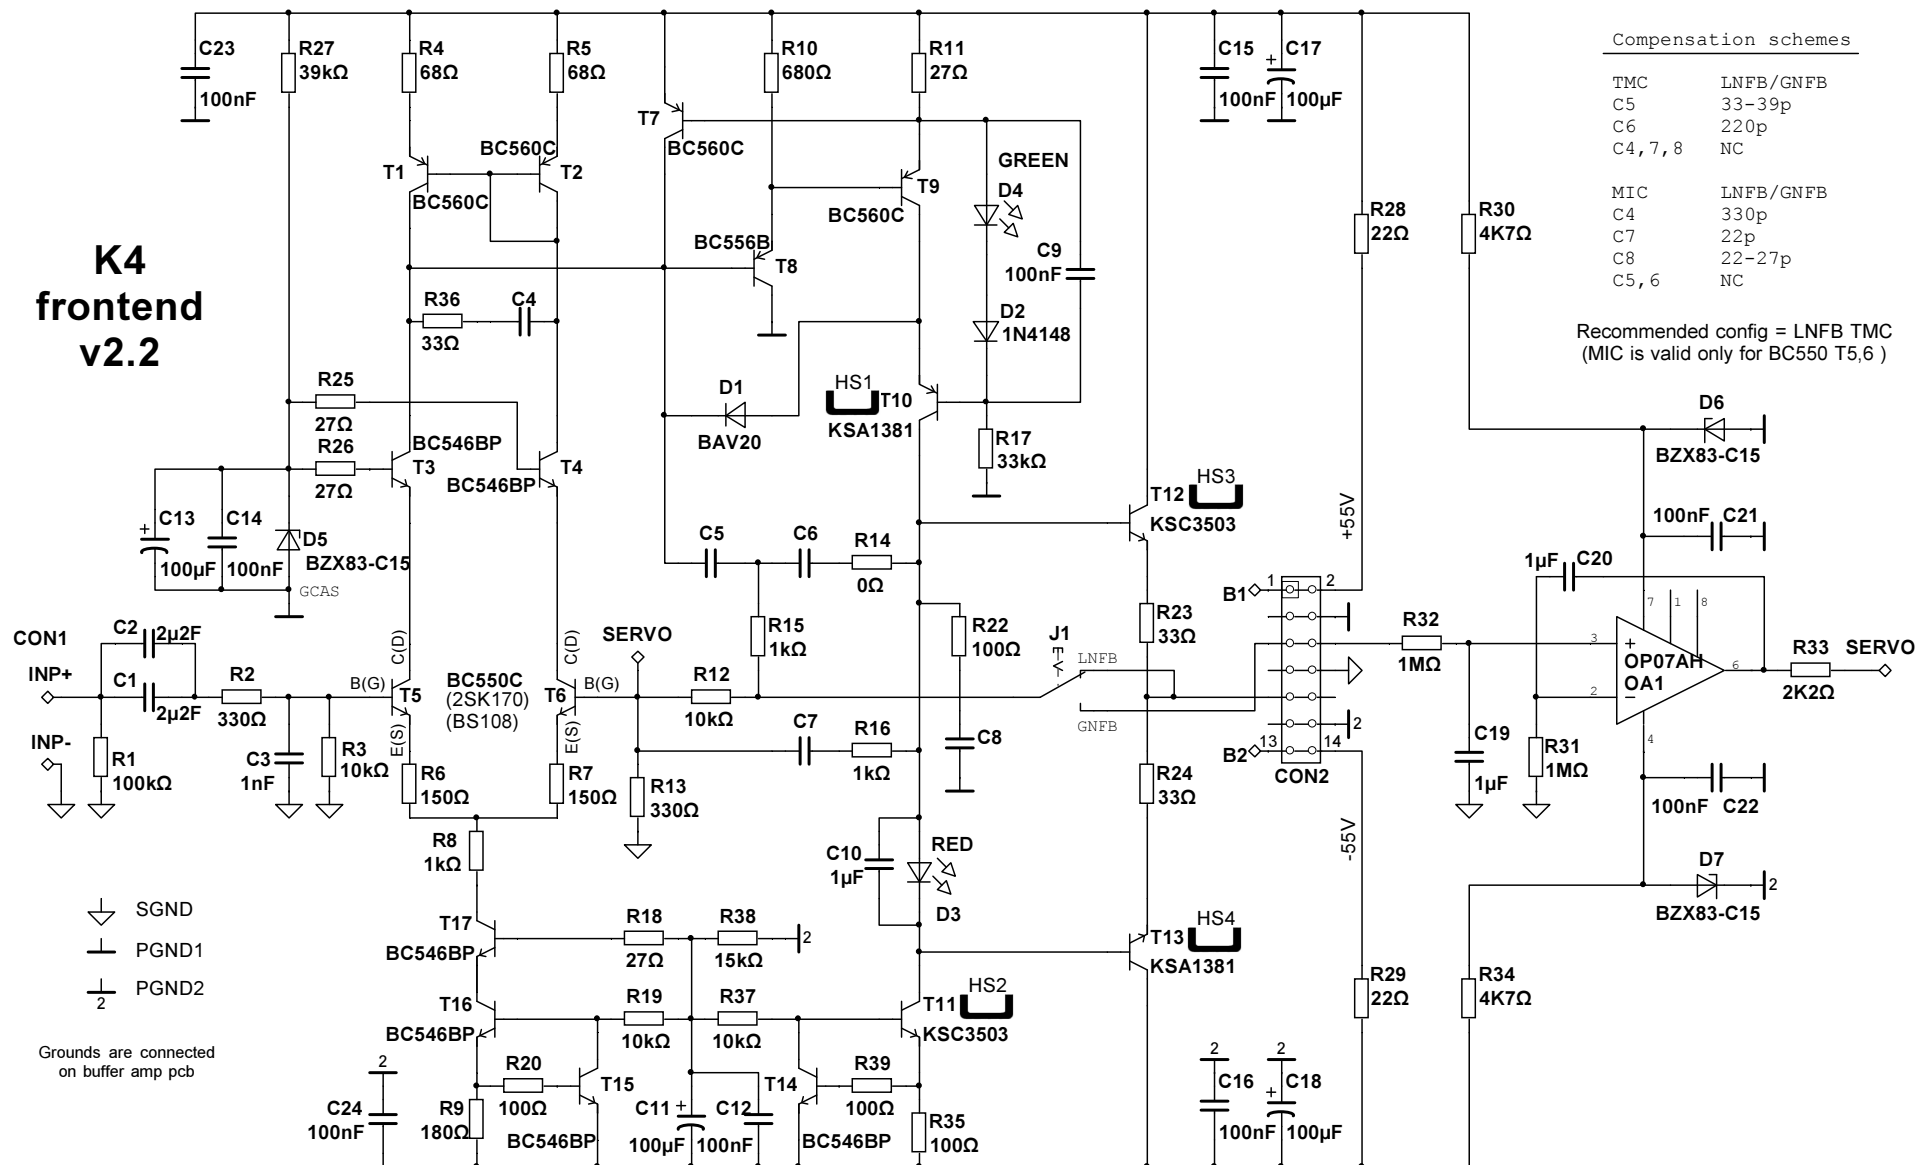


Compensation schemes

TMC LNFB/GNFB
C5 33-39p
C6 220p
C4, 7, 8 NC



MIC LNFB/GNFB
C4 330p
C7 22p
C8 22-27p
C5, 6 NC

Recommended config = LNFB TMC
(MIC is valid only for BC550 T5,6)



Grounds are connected
on buffer amp pcb

J1 - NFB selector
GNFB - global
LNFB - local

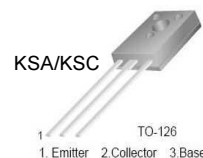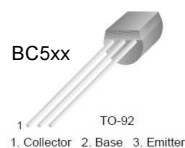

CAUTION !
In GNFB mode do NOT use regulated
auxiliary PSU located on K200 buffer amp pcb.
So, pull out fuses F3 and F4, otherwise,
HF oscillation occurs when amp clips.